
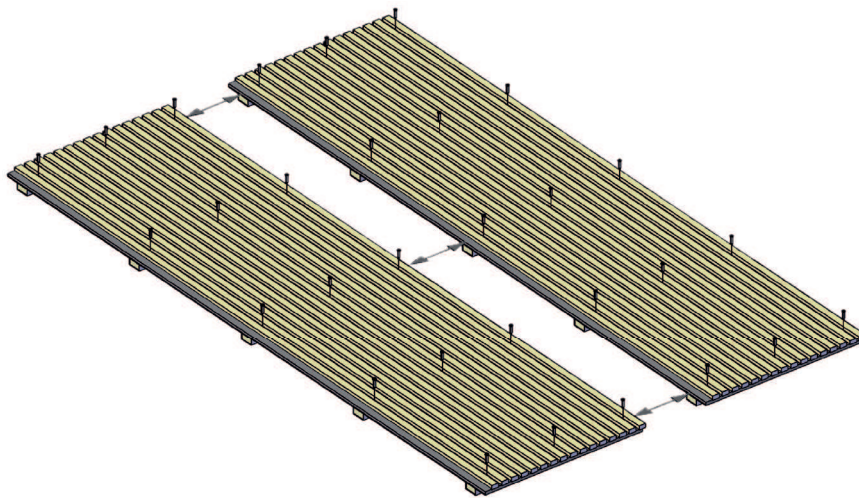


INSTALLATION

We recommend for the installation, to screw the panels to the wall, as well as the ceiling. Use screws of the same colour as the base felt, for a nicer appearance.

The panel may be attached directly to the base surface, with the screws, in case the base surface is of wood. We recommend using wooden rafters for a more convenient installation to stone walls.

NB!: Make sure that you install the panels in the right direction or with an overlap with each other, to produce a complete end result.

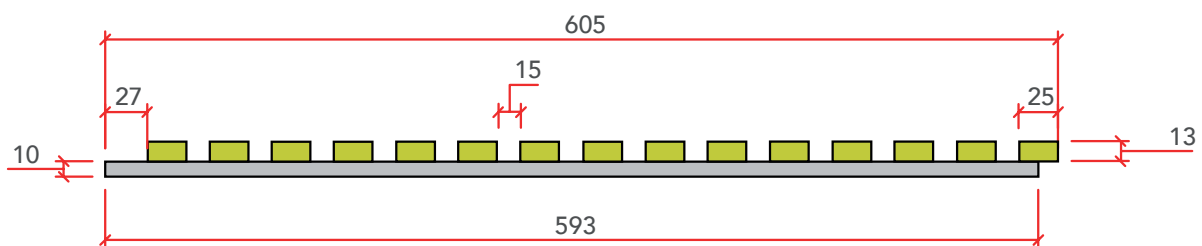

Install with an overlap

Phone: +372 600 7666
E-mail: plaat@plaatdetail.ee

Suur-Paala 5
13619 Tallinn Estonia



Enhanced acoustics design panel from recovered sea plastic