

INSTALLATION



For the installation, we recommend to screw the panels directly to the wall or ceiling. For a nicer appearance, use screws of the same colour as the base felt of the panel (included).

In case the base surface is wood, the panel may be attached with screws directly to the base surface. For a more convenient installation to stone walls, we recommend to use wooden rafters.

When installing panels to the wall the screws should be used after every max 600mm. When installing to the ceiling, the screws should be used after every max 400mm and additional assembly glue should be used.

For possible material expansion due to temperature and humidity, leave a gap of 3-5mm between the panel and the floor/ceiling (when installing to the ceiling between panels and the wall).

NB! To achieve a complete end-result, make sure to install the panels in the right direction to each other with an overlap.

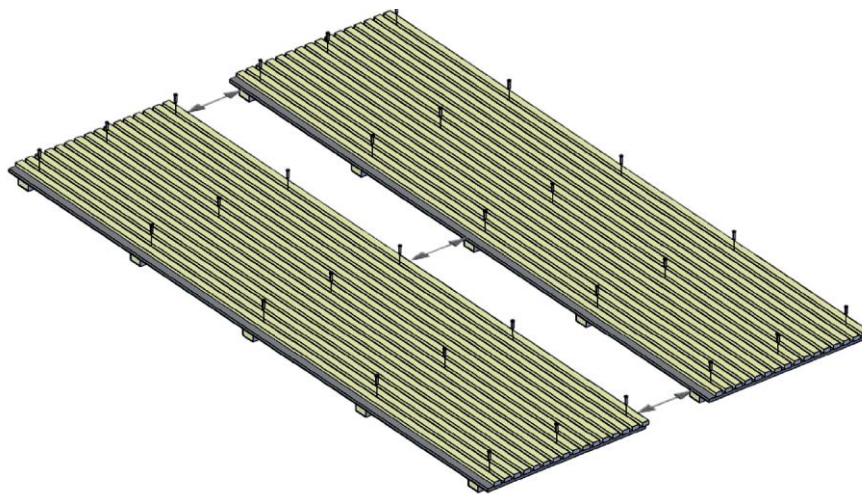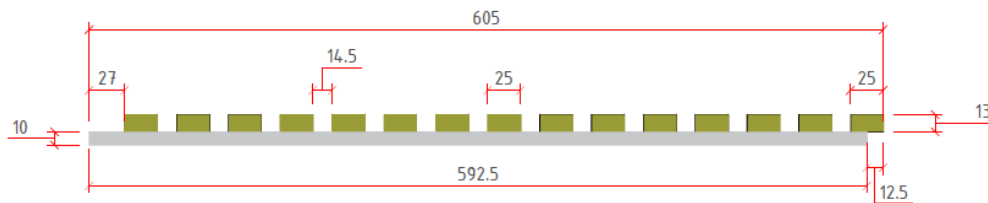

Install with an overlap

MAINTENANCE

Panels can be cleaned with non-abrasive care products. Use a damp cloth to clean the ribs and remove excess water with a dry cloth.

Felt can be cleaned using a vacuum cleaner.

Phone: +372 600 7666
E-mail: vaga@plaatdetail.ee

Suur-Paala 5
13619 Tallinn Estonia



Acoustic design panel from recycled plastic.